## **AWM** Navigation

13/12/2024 8:06 am +10

## Finding a road or location on the network

The search bar in the top right corner of the map allows you to quickly jump to specific locations on the map.



There are four ways to use the bar (all examples are using Waigani Drive at the main entrance to the Department of Works and Highways headquarters):

1. Enter the Road ID of the road you are looking for and enter the distance along that road to go to the specific location.



2. Enter the Road Name (or enough of a portion of the name to filter the list down only a few options) of the road you are looking for and enter the distance along that road to go to the specific location. Note all the road names in ALL CAPS are part of the road network setup in AWM.



3. For a more general location, you can enter the name of the location (such as a village name) and if google has the location identified in its map data, you can select the location to go to it (be careful to check the full description offered in case you end up in another country instead).

100		
	Q	department of works and high
	Dep	artment of Works & Highways, Works Headquarter, Waigani Driv
13	Dep	artment of Works and Highways, Lae, Papua New Guinea
	Dep	artment of Works and Highways - Kimbe, Kimbe, Papua New Gu
	Dep	artment of Works & Highways (Simbu), Kundiawa, Papua New G
X	Dep	artment of Public Works and Highways, Iloilo City Proper, Iloilo C
3	4	•
18	10.00	

4. Latitude and longitude values can be entered in the format Lat, Long as decimal figures to go to a specific location without needing to know the road id or distance down the road (see 'The i Tool - Getting the details of a location in AWM' below to see how you can then get the Road ID, Name, and distance down the road to use). Make sure to keep the negative values for southern Latitudes.



## **Other Navigation Tools**





Information from map

Measure on map

Zoom to Extents

Zoom to Area

+ -

Zoom in and out

## The i Tool - Getting the details of a location in AWM

To locate a spot in AWM terms, use the i button located at the bottom right of the map view and click on the point you need to locate.



This will load up the location data, giving you the road name (with ID), location along that road, along with the side and offset from the centreline to your selected point (along with a easting and northing value):

Road Info		Carriageway by N
<b>Ç</b> Refresh		Sealed Road
Location		Track - 4WD only
Coordinates	521102.39, 8954394.78	Pathway Proposed Road
Road	WAIGANI DRIVE (SOUTHBOUND) (10118)	Provinical Roads T
Location	560 m	🗄 🗸 😑 Intersection (PNG) 🍸
Side	Right	Major Culvert (PN Y
Offset	10.58 m	River Crossing (P T
Road Type	Local Authority	Causeway (PNG)
Carriageway #12137		III V Bridge Holding (P
Location	0 - 1473 m	II V O (TEMP) DOWNER
Width	6 m	V Yes
Name	SIR HUBERT/WAIGANI RAB - WAIGANI/POREPORENA RAB	Data Fix Request 🍸
Owner	Central Government	
Hierarchy	NATIONAL MAIN ROAD	
Pavement Type	Thin Surfaced Flexible	
Pavement Use	ADT < 100	
Network Type	Sealed Road	
Carriageway Type	Dual Carriageway	

Using this on two points along the road is a quick way of identifying which direction the road is running in when you are unsure of this.