AWM Basics

07/08/2026 10:54 am +10

System Name: Asset & Work Manager (AWM) - formerly called RAMM
Software Company: ThinkProject

New User

If you are a new user, you will need to be issued with a login. Request a login by contacting support@pngroads.com.

You will need to include the username, email address, mobile phone number, role and province.

KnowledgeBase

The DoWH have set up a knowledgebase to support asset management, road management and the use of AWM by DoWH staff and external parties.

The knowledge base is called: WorksKuru


Website: help.pngroads.com

AWM Access & Login

Website Address: https://go.ramm.com


Login process:

1. Enter the web address into your web browser or use your saved bookmark
2. Enter username (this will be your email address in the future)
3. Click on 'Next'

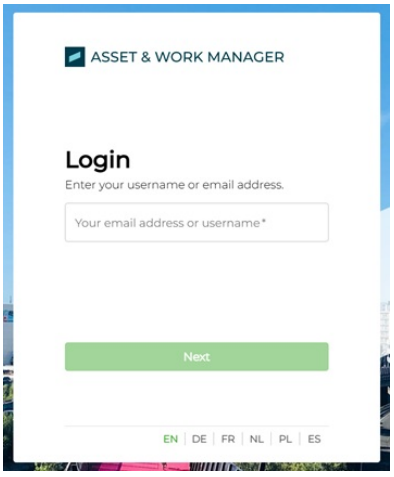


4. Enter your password and click on 'Log In'


5. Select the database you want to use (switch between the Master database and the Training database)

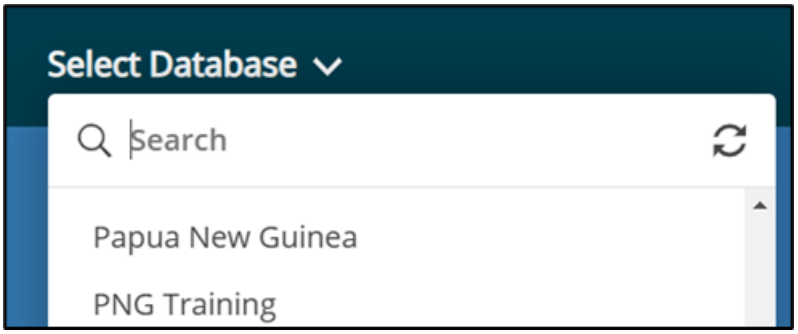

AWM Map Screen

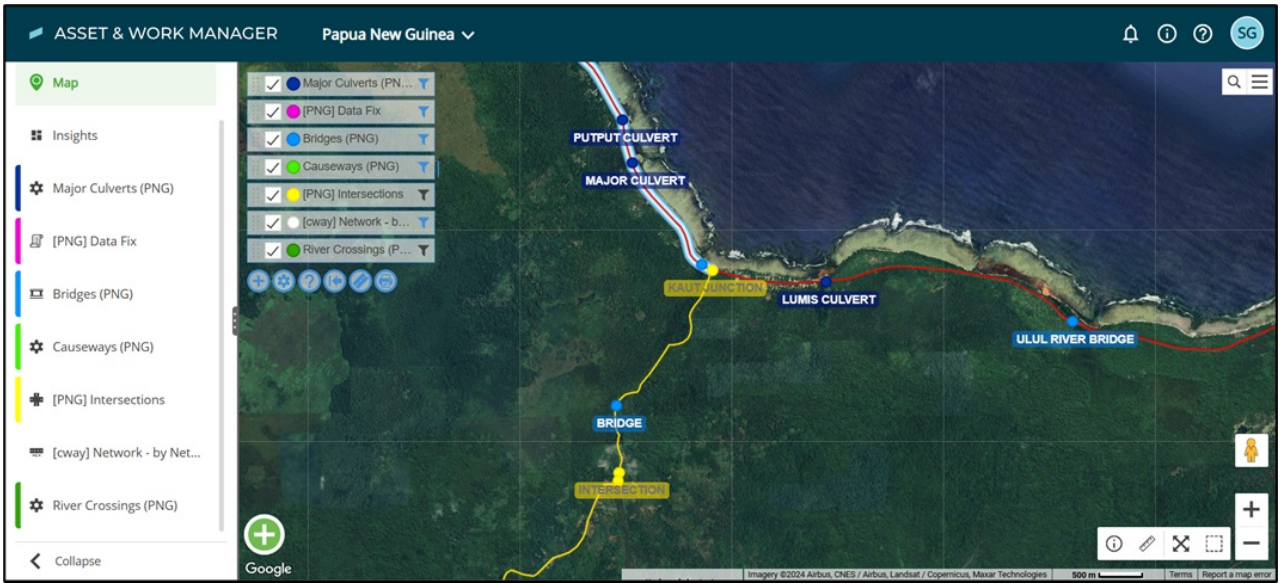


List of Current Information Available as at Rollout

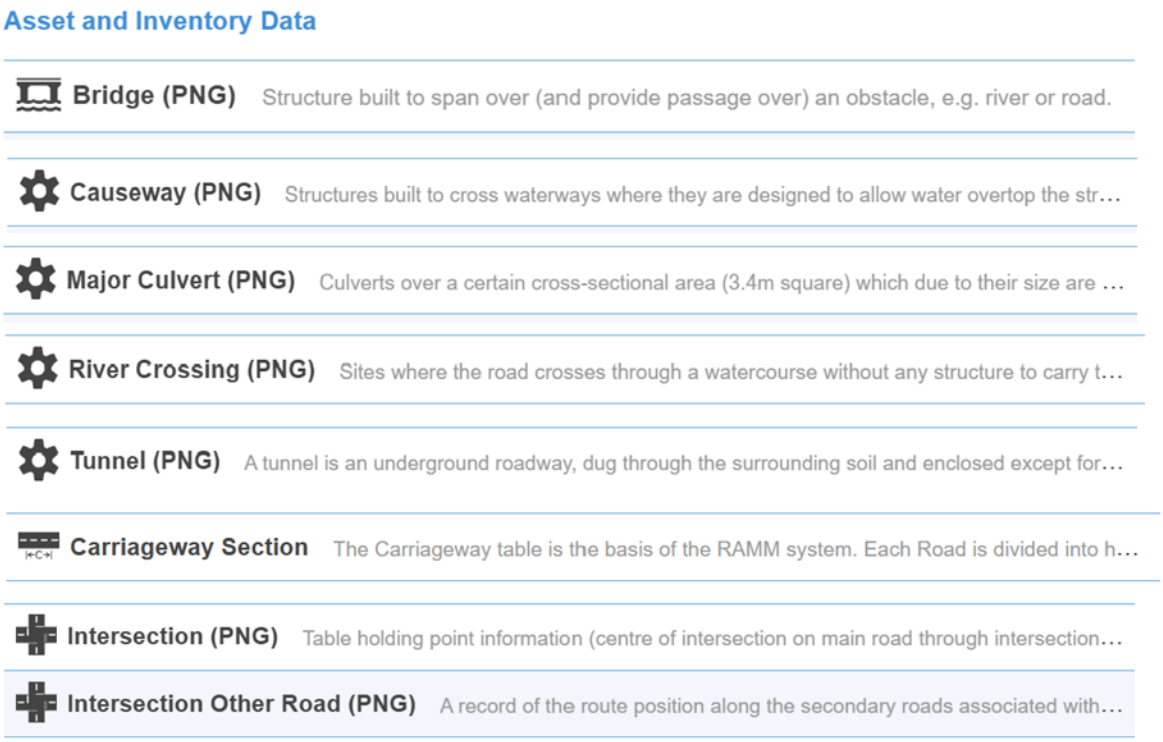

Other Base Layers

Select the Hamburger icon to access other Base Layers or to use a Custom Base Layer.

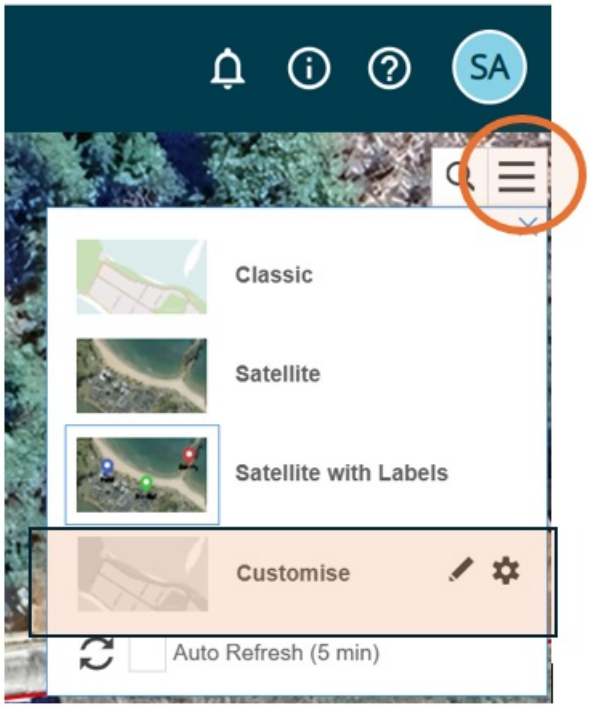

For further information, refer to the remaining articles in theAWM help section.